

**6-3.Initialization**

**Items to initialize**

---

The following items must be initialized for normal system operation in cases such as after maintenance is performed on the vehicle.

| Item                         | When to initialize   | Reference |
|------------------------------|--|-----------|
| Oil maintenance              | After changing engine oil  | P.132     |
| Tire pressure warning system | When changing the tire inflation pressure by changing traveling speed. | P. 271    |